RS2 - X2

With you on the front line

Quick Start and User Manual

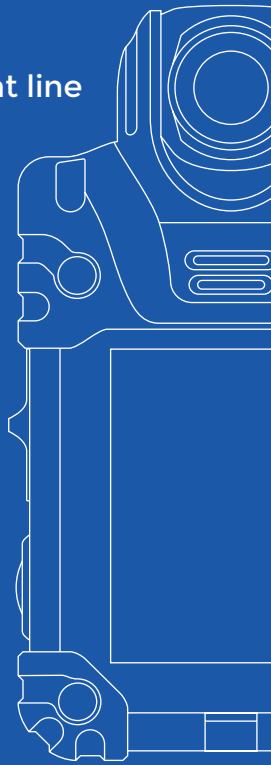

REVEAL
WITH YOU ON THE FRONT LINE

REVEALMEDIA.COM

REVEAL

Introduction

Welcome to the next generation of body worn cameras. For your convenience, the camera is set up and ready to go in three easy steps.

1 Charge

Charge the camera for three hours or until the charging light turns green.

2 Mount

Choose how to mount your camera; you can use either the Klickfast attachments, clips or a lanyard.

3 Record

Slide the red switch down to start recording. To stop recording, slide the red switch up.

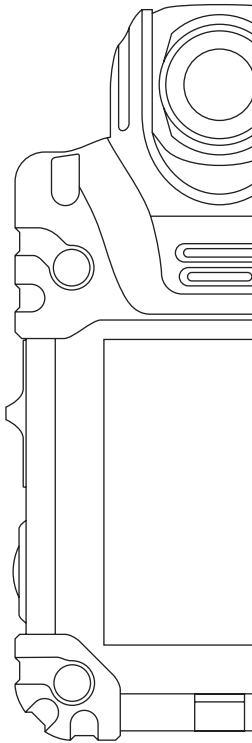

1 Charge

Open the cover on the bottom of the camera and insert into a RS2 docking station. Alternatively, connect to a USB cable.

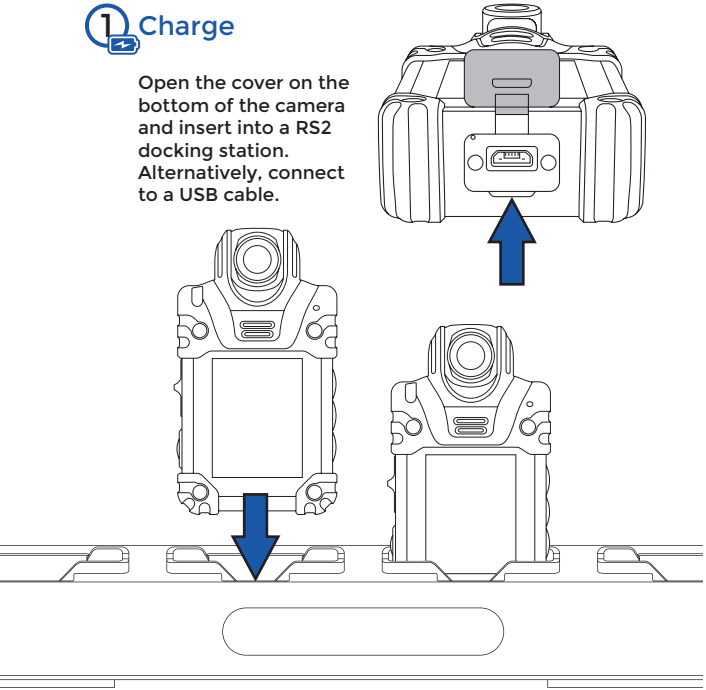

2 Mount

To use the Klickfast mounting option:

- Unscrew the clip
- Align the Klickfast stud
- Use the screwdriver to secure

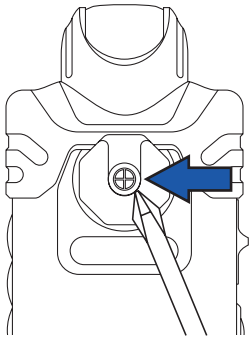

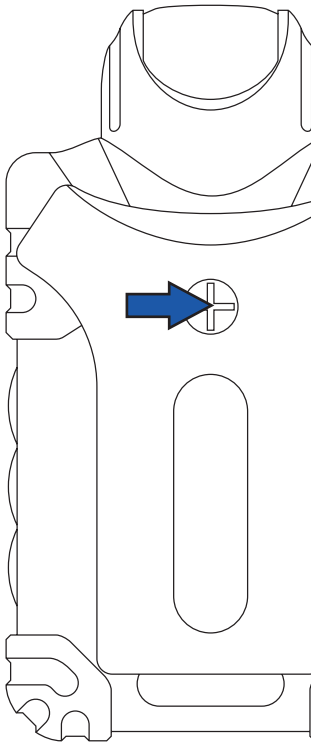

Quick start

Record

Simply pull down the red sliding switch to record. The camera will beep three times to let you know it is recording. In addition, the LED light will be flashing red, and the red recording light will be flashing on the display.

To stop recording, slide the red switch back up. The camera will beep twice and both the LED and display lights will stop flashing.

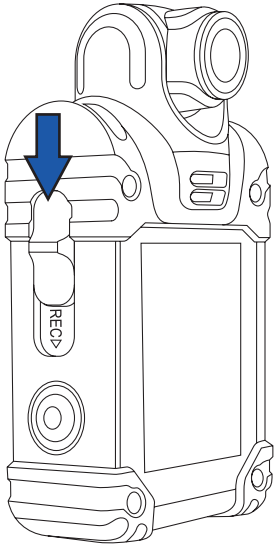

Operation

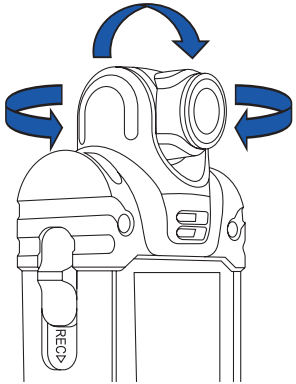

Camera articulation

CAUTION:
DO NOT OVER ROTATE!
The camera head rotates 270 degrees horizontally and 60 degrees vertically.

Power on/off

When the unit is off, press and hold the function button to turn power on.

Press and hold to turn power off.

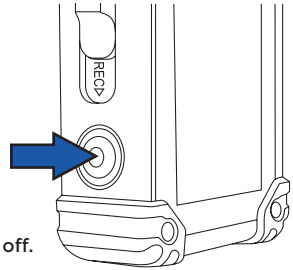

Operation

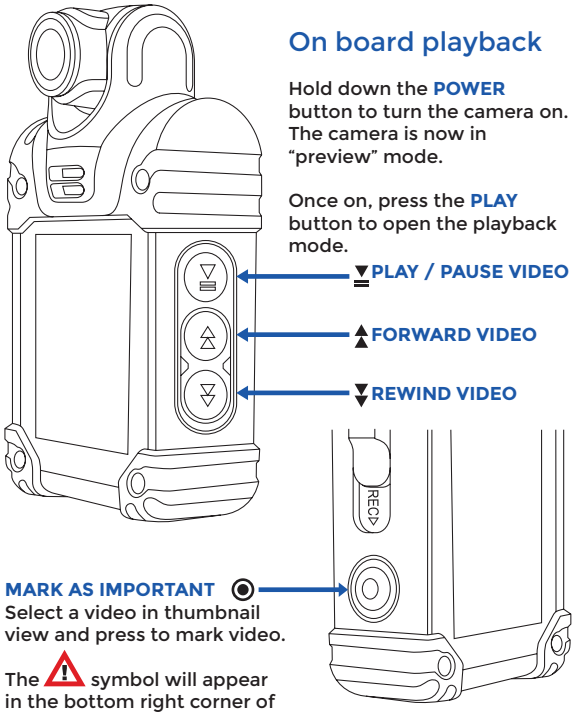

On board playback

Hold down the **POWER** button to turn the camera on. The camera is now in "preview" mode.

Once on, press the **PLAY** button to open the playback mode.

MARK AS IMPORTANT
Select a video in thumbnail view and press to mark video.

The ⚠ symbol will appear in the bottom right corner of the thumbnail

Operation

Show menu options

During preview, press and hold **FWD** and **RWD** simultaneously to bring up menu screen.
NOTE: Menu options are not changeable on camera alone.

Stealth Mode

Hold **RWD** button for three seconds to activate or deactivate Stealth Mode.

Stealth mode enables recording without the front facing screen or LED light.

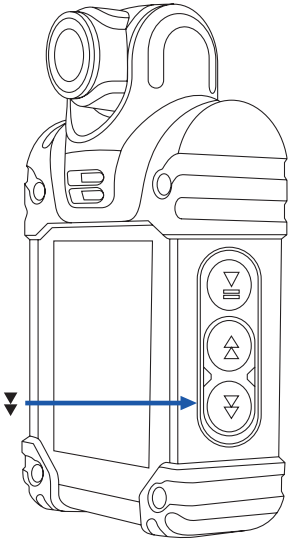

Function button

Go back

Short press to go back when in playback mode.

Mark as important

During record, press to mark as important.

During playback, short press to mark as important.

The ⚠ symbol will appear in the bottom right corner of the thumbnail

Power off

When not recording, press for longer than 2 seconds to turn off.

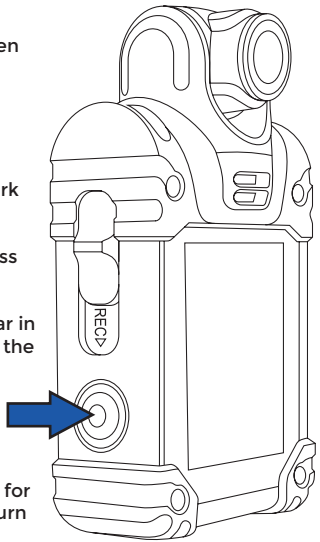

Edit menu settings

Through DEMS

Open the auto-uploader or camera interface. Right click on a camera and select “settings”.

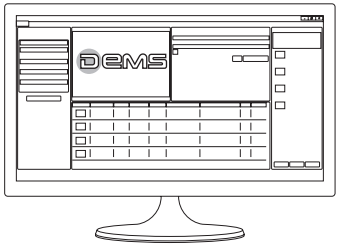

Without DEMS

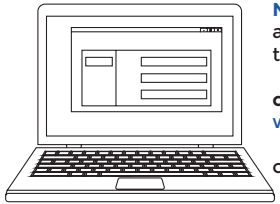

NOTE: You must be the administrator on the computer to change the camera settings.

1) Download the **Reveal camera settings manager** from www.revealmedia.com/downloads

2) Run the program on the computer

3) Select which camera you want to edit from the list on the left and edit the options on the right.

Editable menu settings

1. RESOLUTION	1280 x 720 30FPS (DEFAULT)
	848 x 480 60FPS
	1920 x 1080 30FPS
	1440 x 1080 30FPS
2. PRE-RECORDING Stores 30 seconds prior to record activation	ON
	OFF (DEFAULT)
3. AUDIO ALARMS	ON (DEFAULT)
	OFF
4. WHITE BALANCE	AUTO (DEFAULT)
	SUNNY / CLOUDY / FLUORESCENT/INCANDESCENT
5. LANGUAGE	ENGLISH (DEFAULT)
6. TIME AND DATE STAMP	ON (DEFAULT)
	OFF
7. TIME AND DATE SETUP	SET YYYY/MM/DD HR/MIN/SEC
8. START IN STEALTH MODE	ON
	OFF (DEFAULT)
9. AUTO LCD OFF	30 SECS / 2 MIN / 5 MINS / OFF

Editable menu settings

10. DEFAULT SETTINGS	NO / YES
11. UNIT ID SETUP	USER SET (five alphanumerics)
12. PRE-RECORD MUTE No audio is recorded during the pre-record section of video. Once the user slides into record mode, audio is then recorded	ON
	OFF (DEFAULT)
13. PROTECTED MODE The files cannot be played back on standard media players. Playback requires Reveal Media DEMS V3 or above	ON
	OFF (DEFAULT)
14. TRUSTED MODE RS2 - X2 will not mount as mass storage device unless connected to Reveal Media DEMS V3 or above	ON
	OFF (DEFAULT)
15. RECORD OFF MODE For single or two actions to stop recording	SLIDER ONLY (DEFAULT)
	SLIDER PLUS BUTTON
16. FIRMWARE VERSION	Displays what version of firmware is installed on the device

WARNING!

- Camera head does not rotate completely 360°. **FORCING IT WILL CAUSE DAMAGE TO THE CAMERA HEAD!**

- Please take care when connecting and disconnecting the USB cable.

Mounting and usage options

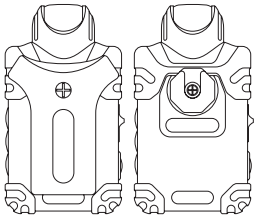

Body Mount

Attach with pocket clip, klickfast or shirt clip onto the chest.

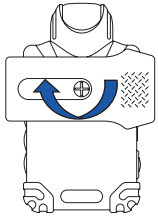

Shirt Clip

The shirt clip can be reversed for female shirts.

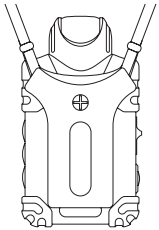

Lanyard Clip

For use of a lanyard around the neck.

Mounting and usage options

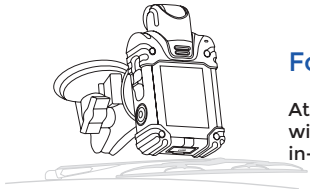

For in-car use

Attach suction mount to windscreen or dashboard for in-car camera. (optional extra)

Harness

For use with loose fitting clothes or uniforms. (optional extra)

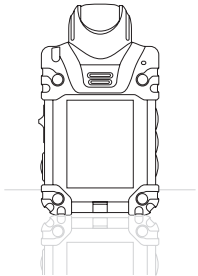

Table top

For use in interviews and other static situations.